



SR3D™ 8” NANOFILTRATION ELEMENTS

Hard Overwrap Low Pressure, Selective Rejection Elements

PRODUCT DESCRIPTION

Membrane Chemistry: Proprietary TFC™ polyamide chemistry
Membrane Type: SR3D™ - selective rejection nanofiltration
Molecular weight cut-off: 200 Daltons
Construction: Spiral wound with fiberglass outerwrap
Applications: Separation of higher molecular weight components (>200 Daltons) and multivalent ions from various feed solutions, deashing
Options: Feed Spacer: G (28 mil), N (31 mil) or V (46 mil)

SPECIFICATIONS

Part Number	Model	Nominal Permeate Flow gpd (m ³ /d)	Rejection percent	Active Membrane Area ft ² (m ²)	Feed Spacer mil (mm)
8882236	8040-SR3D-GNHN	6,200 (23.5)	> 99.0	400 (37.2)	28 (0.7)
8882237	8040-SR3D-NNHN	5,275 (20.0)	> 99.0	330 (30.7)	31 (0.8)
8882238	8040-SR3D-VNHN	4,500 (17.0)	> 99.0	260 (24.1)	46 (1.2)


Test Conditions: 5,000 mg/l MgSO₄ in deionized water at 95 psi (655 kPa) applied pressure, 15% recovery, 77°F (25°C), pH 7.5

OPERATING AND DESIGN INFORMATION*

Typical Operating Pressure: 200 - 600 psi (1,380 - 4,140 kPa)
Maximum Operating Pressure: 600 psi (4,140 kPa)
Maximum Operating Temperature: 122°F (50°C)
Maximum Cleaning Temperature: 113°F (45°C)
Maximum Continuous Free Chlorine: <0.1 mg/l
Allowable pH – Continuous Operation: 4 - 10
Allowable pH – Short Term Cleaning: 1.7 – 11.5
Maximum Differential Pressure Per Element: 10 psi (69 kPa)
Maximum Differential Pressure Per Vessel: 60 psi (414 kPa)
Maximum Feed Turbidity: 1 NTU
Maximum Feed SDI (15 minute test): 5

* Consult Process Technology Group for specific information.

NOMINAL DIMENSIONS AND WEIGHT*

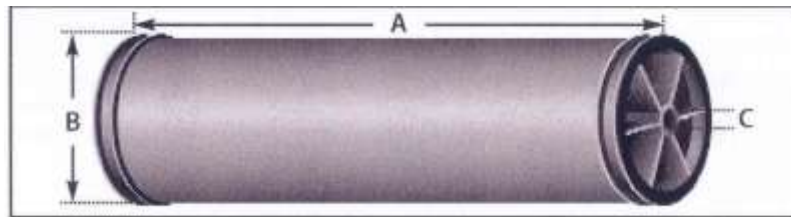

Model	A inches (mm)	B inches (mm)	C inches (mm)	Weight lbs (kg)	Part Numbers		
					Interconnector	O-ring	Brine Seal
All models	40 (1,016)	8 (203)	1.125 (29)	44 (20)	0035260	0035464	0035705

* Dimensions are provided for reference only and should not be interpreted as accurate specifications.

Performance:

Performance specifications shown on the front side of this document are nominal values. Individual element permeate flows may vary +20/-15% from the values shown.

Selective Rejection (SR3D™) nanofiltration membrane performance is highly dependent on feed chemistry, temperature, pH, and solution concentration. Performance can only be accurately known through pilot study. KMS strongly recommends that the appropriate pilot studies be conducted to determine suitability for a given application.

Operating Limits:

- **Operating Pressure:** Maximum operating pressure is 600 psi (4,140 kPa). Typical operating pressure for SR3D systems is in the range of 150 psi (1,035 kPa) to 250 psi (1,725 kPa). Actual operating pressure is dependent upon system flux rate (appropriate for feed source) as well as feed salinity, recovery and temperature conditions.
- **Permeate Pressure:** Permeate pressure should not exceed feed-concentrate pressure by more than 5 psi (34 kPa) at any time (on-line, off-line and during transition).
- **Differential Pressure:** Maximum differential pressure limits are 10 psi (69 kPa) per element. Maximum differential pressure for pressure vessel is 60 psi (414 kPa).
- **Temperature:** Maximum operating temperature is 122°F (50°C). Maximum cleaning temperature is 113°F (45°C).
- **pH:** Allowable range for continuous operation is pH 4-10. Allowable range for short term cleaning is pH 1.7-11.5. It is recommended to limit the exposure of the SR3D membrane to the extended pH range to 4 hours, once per month.
- **Turbidity and SDI:** Maximum feed turbidity is 1 NTU. Maximum feed Silt Density Index (SDI) is 5.0 (15 minute test). Experience has shown that feedwater with turbidity greater than 0.2 NTU generally results in frequent cleanings.

- **Recovery:** Maximum recovery is site and application specific. In general, single element recovery is approximately 15% per element.

Chemical Tolerance:

- **Chlorine:** Exposure of SR3D membrane to free chlorine or other oxidizing agents such as permanganate, ozone, bromine and iodine is not recommended. SR3D membrane has a free chlorine tolerance of approximately 2,000 ppm-hours based on testing at 77°F (25°C), pH 8. This tolerance may be significantly reduced if catalyzing metals such as iron are present or if the pH and/or temperature are different. Sodium metabisulfite (without catalysts such as cobalt) is the preferred reducing agent. SR3D membrane has a chloramine tolerance of approximately 60,000 ppm-hours in the absence of free chlorine based on testing at 77°F (25°C), pH 8.
- **Cationic (Positively Charged) Polymers and Surfactants:** SR3D membrane may be irreversibly fouled if exposed to cationic (positively charged) polymers or surfactants. Exposure to these chemicals during operation or cleaning is not recommended.

Lubricants:

For element loading, use only the recommended silicone lubricant (or approved equivalent), water or glycerin to lubricate O-rings and brine seals. The use of petroleum based lubricants or vegetable based oils may damage the element and void the warranty.

Service and Ongoing Technical Support:

KMS has an experienced staff of professionals available to assist end users and OEM's for optimization of existing systems and support with the development of new applications. Along with the availability of supplemental technical bulletins, KMS also offers a complete line of KOCHKLEEN™ membrane cleaners, RO pretreatment and maintenance chemicals.

The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information.

Koch Membrane Systems, Inc., www.kochmembrane.com

Corporate Headquarters: 850 Main Street, Wilmington, Massachusetts 01887-3388, US, Tel. Toll Free: 1-888-677-5624, Telephone: 1-978-694-7000, Fax: 1-978-657-5208
European Headquarters: Koch Chemical Technology Group Ltd., Units 3-6, Frank Foley Way, Stafford ST16 2ST, GB, Telephone: +44-178-527-2500, Fax: +44-178-522-3149

• Aachen DE • Lyon FR • Madrid ES • Milan IT • Wijnegem BE • Beijing & Shanghai CN • Mumbai & Chennai IN • Melbourne & Sydney AU • SG • Sao Paulo BR • Manama BH •

The FLOW LINES DESIGN, TFC, KOCHKLEEN and SR3D are trademarks of Koch Membrane Systems, Inc.
The STYLIZED K is a trademark of Koch Industries, Inc.

Koch Membrane Systems, Inc. is a Koch Chemical Technology Group, LLC company.

© 2013 Koch Membrane Systems, Inc. All rights reserved worldwide.

04/13 Rev 13-1