



# FLUID SYSTEMS<sup>®</sup> TFC<sup>®</sup> HR 8" ELEMENTS

*High Rejection, High Area RO Elements for Brackish Water*

**PRODUCT DESCRIPTION**

**Membrane Chemistry:** Proprietary TFC<sup>®</sup> polyamide  
**Membrane Type:** TFC<sup>®</sup> HR membrane  
**Construction:** High area spiral wound with fiberglass outerwrap  
**Applications:** High rejection for brackish water treatment

**SPECIFICATIONS**

KMS Part Number	Model	Permeate Flow gpd (m <sup>3</sup> /d)	Chloride Rejection percent	Active Membrane Area ft <sup>2</sup> (m <sup>2</sup> )	Feed Spacer mil (mm)
8882242	8040-HR-400-34	11,000 (41.6)	99.55	400 (37.2)	34 (0.9)
8882243	8040-HR-440-28	12,100 (45.8)	99.55	440 (40.9)	28 (0.7)


Test Conditions: 2,000 mg/l NaCl solution at 225 psi (1,550 kPa) applied pressure, 15% recovery, 77°F (25°C) and pH 7.5

**OPERATING AND DESIGN INFORMATION\***

**Typical Operating Pressure:** 150 - 250 psi (1,035 - 1,725 kPa)  
**Maximum Operating Pressure:** 600 psi (4,140 kPa)  
**Maximum Operating Temperature:** 113°F (45°C)  
**Maximum Cleaning Temperature:** 113°F (45°C)  
**Maximum Continuous Free Chlorine:** <0.1 mg/l  
**Allowable pH – Continuous Operation:** 4 - 11  
**Allowable pH – Short Term Cleaning:** 2.5 - 11  
**Maximum Differential Pressure per 40" Long Element:** 10 psi (69 kPa)  
**Maximum Differential Pressure Per Vessel:** 60 psi (414 kPa)  
**Maximum Feed Turbidity:** 1 NTU  
**Maximum Feed SDI (15 minute test):** 5

\* Consult Process Technology Group for specific information

**NOMINAL DIMENSIONS AND WEIGHT\***

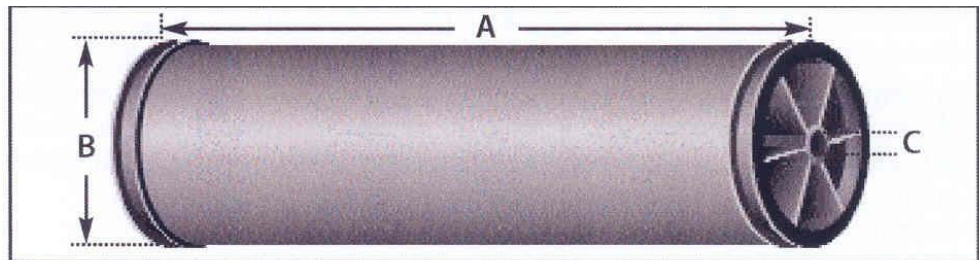

Model	A		B		C		Weight lbs (kg)	Part Numbers		
	inches (mm)	inches (mm)	inches (mm)	inches (mm)	Interconnector	O-ring		Brine Seal		
8040-HR-400-34	40 (1,016)	8 (203)	1.125 (29)	44 (20)	0035260	0035464	0030584			
8040-HR-440-28	40 (1,016)	8 (203)	1.125 (29)	44 (20)	0035260	0035464	0030584			

\* Dimensions are provided for reference only and should not be interpreted as accurate specifications.

### Performance:

Performance specifications shown on the front side of this document are nominal values. Individual element permeate flows may vary +20/-15% from the values shown. Minimum chloride ion rejection is 99.2% at the conditions shown.

### Operating Limits:

- **Operating Pressure:** Maximum operating pressure is 600 psi (4,140 kPa). Typical operating pressure for TFC® HR systems is in the range of 150 psi (1,035 kPa) to 250 psi (1,725 kPa). Actual operating pressure is dependent upon system flux rate (appropriate for feed source) as well as feed salinity, recovery and temperature conditions.
- **Permeate Pressure:** Permeate pressure should not exceed feed-concentrate pressure by more than 5 psi (34 kPa) at any time (on-line, off-line and during transition).
- **Differential Pressure:** Maximum differential pressure limits are 10 psi (69 kPa) for a 40" (1,016 mm) long element. Maximum differential pressure for pressure vessel is 60 psi (414 kPa).
- **Temperature:** Maximum operating temperature is 113°F (45°C). Maximum cleaning temperature is 113°F (45°C).
- **pH:** Allowable range for continuous operation is pH 4-11. Allowable range for short term cleaning is pH 2.5-11. It is recommended to limit the exposure of the TFC-HR membrane to the extended pH range to 4 hours, once per month.
- **Turbidity and SDI:** Maximum feed turbidity is 1 NTU. Maximum feed Silt Density Index (SDI) is 5.0 (15 minute test). Experience has shown that feedwater with turbidity greater than 0.2 NTU generally results in frequent cleanings.

- **Recovery:** Maximum recovery is site and application specific. In general, single element recovery is approximately 15%.

### Chemical Tolerance:

- **Chlorine:** Exposure of TFC-HR membrane to free chlorine or other oxidizing agents such as permanganate, ozone, bromine and iodine is not recommended. TFC-HR membrane has a free chlorine tolerance of approximately 1,000 ppm-hours based on testing at 77°F (25°C), pH 8. This tolerance may be significantly reduced if catalyzing metals such as iron are present or if the pH and/or temperature are different. Sodium metabisulfite (without catalysts such as cobalt) is the preferred reducing agent. TFC-HR membrane has a chloramine tolerance of approximately 60,000 ppm-hours in the absence of free chlorine based on testing at 77°F (25°C), pH 8.
- **Cationic (Positively Charged) Polymers and Surfactants:** TFC-HR membrane may be irreversibly fouled if exposed to cationic (positively charged) polymers or surfactants. Exposure to these chemicals during operation or cleaning is not recommended.

### Lubricants:

For element loading, use only the recommended silicone lubricant (or approved equivalent), water or glycerin to lubricate O-rings and brine seals. The use of petroleum based lubricants or vegetable based oils may damage the element and void the warranty.

### Service and Ongoing Technical Support:

KMS has an experienced staff of professionals available to assist end users and OEM's for optimization of existing systems and support with the development of new applications. Along with the availability of supplemental technical bulletins, KMS also offers a complete line of KOCHKLEEN® RO cleaning chemicals.

*The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information.*

---

Koch Membrane Systems, Inc., [www.kochmembrane.com](http://www.kochmembrane.com)

**Corporate Headquarters:** 850 Main Street, Wilmington, Massachusetts 01887-3388, US, Tel. Toll Free: 1-888-677-5624, Telephone: 1-978-694-7000, Fax: 1-978-657-5208

**European Headquarters:** Koch Chemical Technology Group Ltd., Units 3-6, Frank Foley Way, Stafford ST16 2ST, GB, Telephone: +44-178-527-2500, Fax: +44-178-522-3149

• Aachen DE • Lyon FR • Madrid ES • Milan IT • Wijnegem BE • Beijing & Shanghai CN • Mumbai & New Delhi IN • Melbourne & Sydney AU • Singapore • Sao Paulo BR • Dubai UAE •

For related patent and trademark information, visit [www.kochmembrane.com/legal](http://www.kochmembrane.com/legal)  
Koch Membrane Systems, Inc. is a Koch Chemical Technology Group, LLC company.

© 2016 Koch Membrane Systems, Inc. All rights reserved worldwide.

02/16 Rev 16-1